Ports

Front

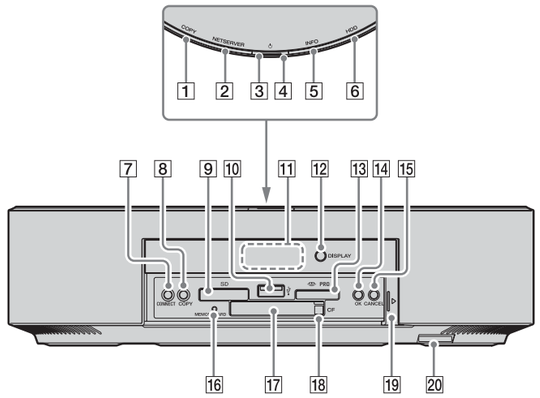

1 COPY indicator light
Indicates the state of a USB device or a memory card and the status of data imported from the device or card.

2 NETSERVER indicator light
Indicates the server test status or the state of the Home Server.

3 ⏻ (POWER) indicator light
Indicates the state of the power supply or the state of the Home Server.

4 ⏻ (POWER) button
Press this button to turn on and off the Home Server.

5 INFO indicator light
Indicates the state of the Home Server.

6 HDD indicator light
Indicates the remaining capacity or the state of the hard disk drive.

7 CONNECT button
Press this button to obtain a permission code for adding a Data Sync (receiving) profile.

8 COPY button
Press this button to import data from a USB device or a memory card.

9 SD (SD memory card) slot
Insert an SD memory card.

10 ⏚ (USB) port
Connect a USB mass storage class device, such as a digital still camera or a digital camcorder. This port is also labeled as Front USB on the Home Server Settings Page.

11 Display
Displays information on the Home Server.

12 DISPLAY button
Press this button to turn on the display on the Home Server and select the required information.

13 Memory Stick slot
Insert a “Memory Stick” media. This slot can also accommodate the Duo-type media without an adapter.

14 OK button
Press this button to confirm the information displayed on the display.

15 CANCEL button
Press this button to cancel the on-going operation. You can also press and hold this button for 10 seconds to clear the administrator registration and the IP address settings.

16 MEMORY CARD access indicator light
Blinks while access to the memory card is in progress.

17 CF (CompactFlash) slot

18 CF (CompactFlash) media eject button

19 Front door
To open the front door, put your fingertip on the left end of the door and slide it half way to the right. To close the door, slide it half way to the left.

20 ID label
Shows the model name of the Home Server.

Back

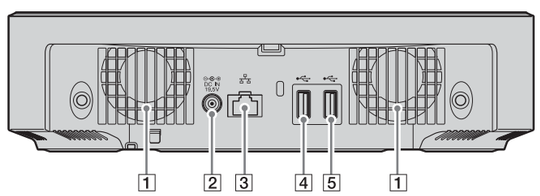

1 Air vents

2 DC IN port
Connect to the AC adapter.

3 Network (LAN) port
Connect a network (LAN) cable.

Note

Be sure not to connect any unsupported networks or any telephone lines to the Network port.

4 ⏚ (USB) port 1
Connect a USB mass storage class device, such as a digital still camera or a digital camcorder. This port is also labeled as Rear USB1 on the Home Server Settings Page.

5 ⏚ (USB) port 2
Connect a USB mass storage class device, such as a digital still camera or a digital camcorder. This port is also labeled as Rear USB2 on the Home Server Settings Page.

SONY

Quick Start Guide

VGF-HS1 Series

Getting to know your VGF-HS1 Home Server

The information provided here is designed to help you become familiar with your Home Server.

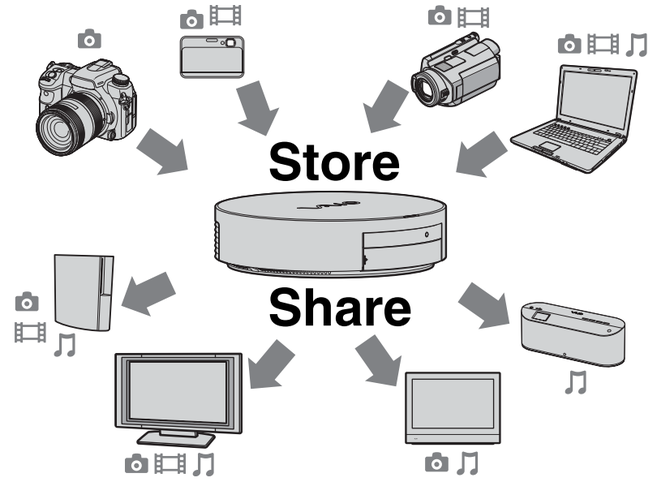

Note

Some of the above products may not be available, depending on the country or region of residency.

Unpacking

❑ Home Server



❑ Rear cover

❑ AC adapter

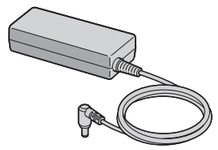

❑ Power cord

❑ Network (LAN) cable (straight-through Ethernet cable, 2 m)

❑ User Guide

❑ Setup Guide

❑ Quick Start Guide
(this document)

❑ Warranty sheet or Guarantee and Service Support booklet
(depending on the country or region of residency)

❑ CD-ROM disc
- Software
  – PC Link
  – VAIO Media
- Contents
  Sample contents
  (also stored on your Home Server at the time of delivery)

Continued

4-121-976-**01**(1)

© 2008 Sony Corporation / Printed in Japan

4-121-976-01

Connecting

1 Connect the supplied network (LAN) cable to the network (LAN) port on the back of your Home Server.

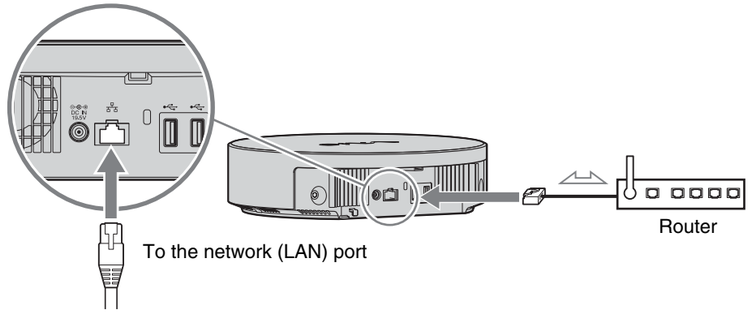

2 Connect your Home Server to a power outlet with the supplied AC adapter.

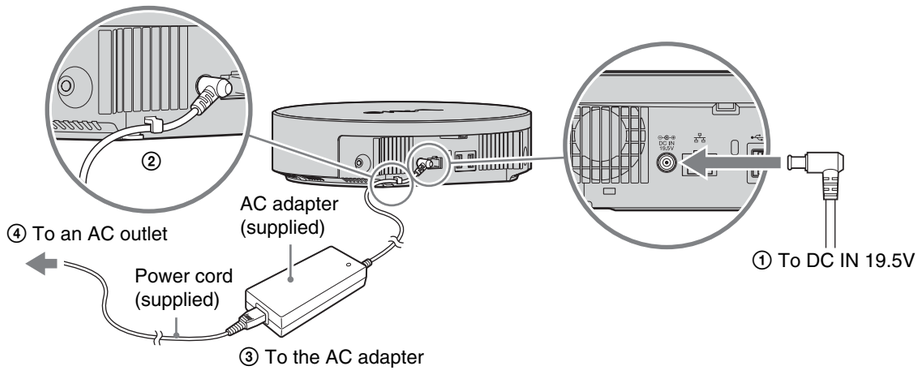

Tip
Please refer to the Setup Guide for detailed instructions on connecting to a network.

3 Attach the rear cover.

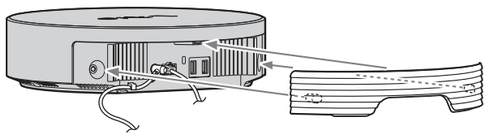

Turning On/Off

Turning on your Home Server

1 Press the ⏻ (POWER) button for about 2 seconds until the ⏻ (POWER) indicator light blinks in orange.
When the Home Server is completely turned on, the power indicator light stops blinking and turns green.

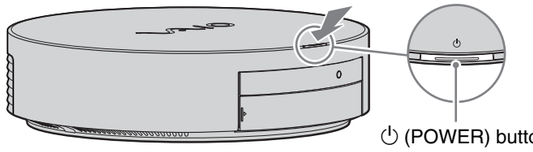

Turning off your Home Server

1 Press the ⏻ (POWER) button for about 2 seconds until the ⏻ (POWER) indicator light blinks in green.

Tip
Your Home Server is designed to be always on and has power saving features to reduce energy use when no being accessed.

Installing Software

The PC Link software provides you with easy ways to keep your folder content updated (data synchronization) between your personal computer and your Home Server.

1 Insert the supplied CD-ROM disc into the optical disc drive of your computer.

2 The License Agreement is displayed, read the terms and conditions, select “I accept the terms of the license agreement,” and click “Next.”
The software setup window appears.

3 Click “PC Link” 1 and then “Install” 2.

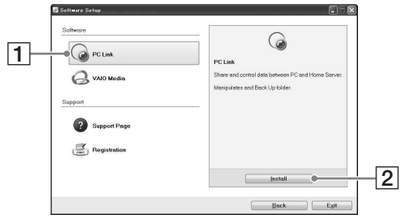

4 Click “Next” on the InstallShield Wizard.

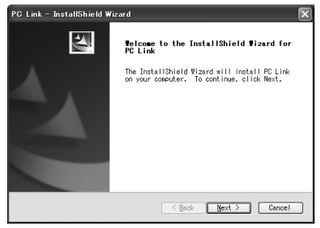
PC Link - InstallShield Wizard
Welcome to the InstallShield Wizard for PC Link
The InstallShield Wizard will install PC Link on your computer. To continue, click Next.
< Back
Next >
Cancel

5 Click “Finish” upon completion of the software installation.

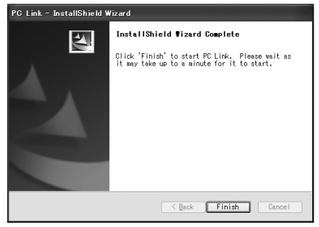
PC Link - InstallShield Wizard
InstallShield Wizard Complete
Click 'Finish' to start PC Link. Please wait as it may take up to a minute for it to start.
< Back
Finish
Cancel

6 Click “Next” when the PC Link software starts.

Initialization
Starting Setup
This initialization process will register your Home Server and setup the folders to be uploaded onto your Home Server.
To start initialization, click Next.
To skip initialization and start PC Link, click Skip initialization.
Skip initialization
< Back
Next >
Cancel

7 Select a Home Server and click “Next.”

Initialization
Selecting Home Server
Available Home Server(s) on your network is displayed below. Choose a Home Server to use and click Next.
MyStation
Search
< Back
Next >
Cancel

8 Select your desired folder(s).

Tip
If the above window does not appear, please refer to “When your Home Server has a global IP address” (page 47) in the Setup Guide.

9 Finish the setup.

Initialization
Setup complete
PC Link setup has completed successfully
When you click Close, this window will be closed and PC Link will launch
Close

When you click “Close,” the PC Link software will begin to upload the selected folders.